FVTX South trigger timing

FVTX_S (56kHz)

MPC 4x4b

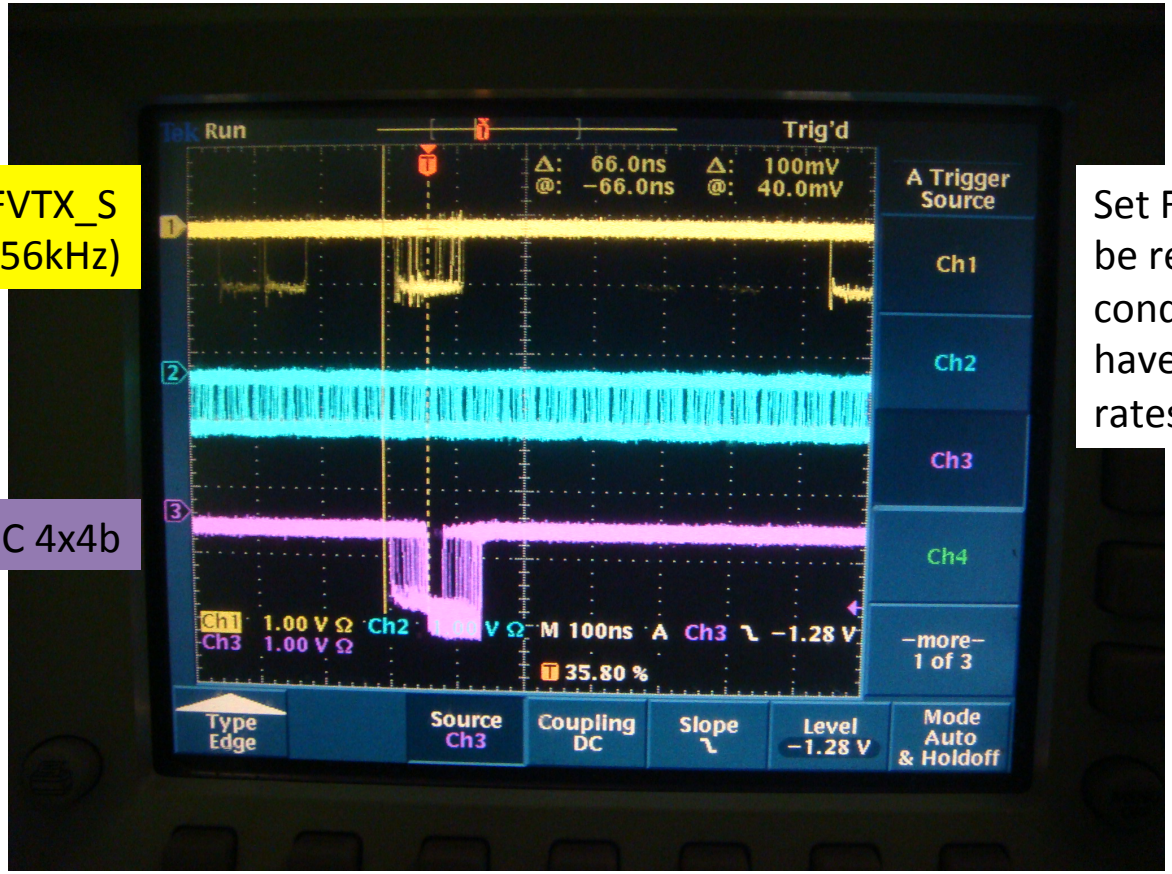

Set FVTX trigger to be relatively loose condition so that to have reasonable rates.

Trigger = ch3
Level=-1.28V

BPC 4x4b trigger signal is taken from the PS model 762 (level translator) NIM output in PRR3.7 rack, 2nd NIM crate from the bottom